


# CORKONUT® INSTALLATION GUIDELINES

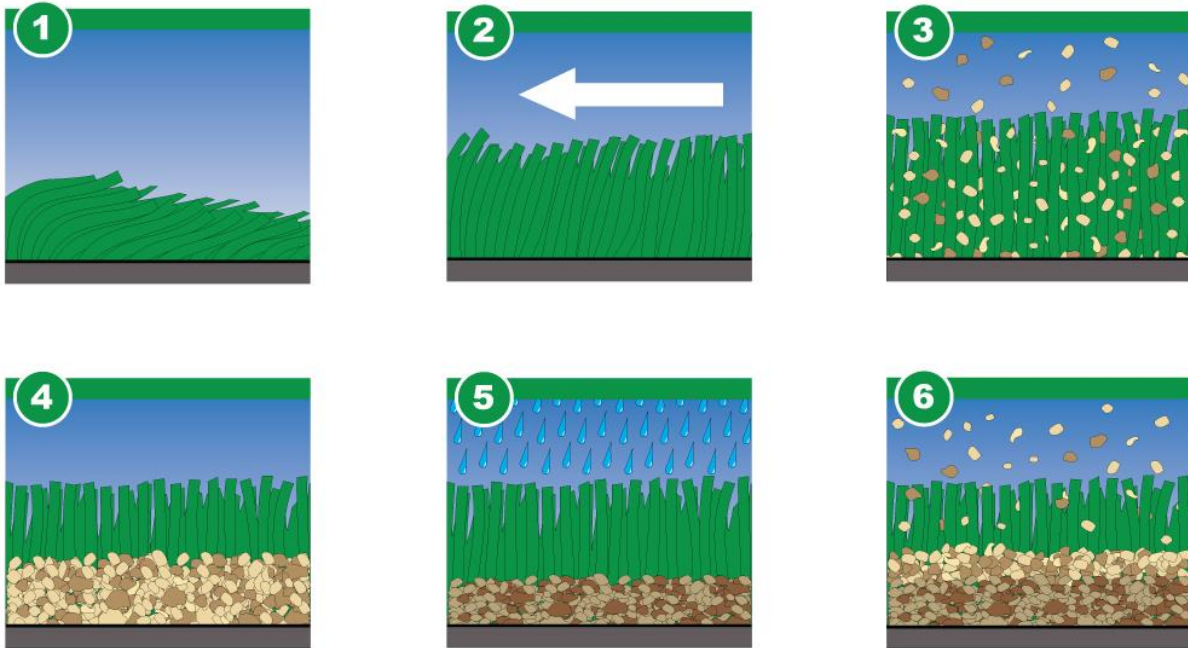

STEPS 1 & 2: BRUSH THE FIBERS OF THE NEWLY INSTALLED GRASS UNTIL UPRIGHT

STEP 3: APPLY THE CORKONUT IN EVEN LAYERS BY HAND OR WITH A TOP-DRESSER

STEP 4: FILL THE GRASS TO WITHIN +/-20MM (0.75") FROM THE TOP OF THE FIBERS

STEP 5: SATURATE THE INFILL LAYER TO ALLOW IT TO SETTLE AND COMPACT

STEP 6: ALLOW THE TURF TO DRY ENOUGH TO APPLY THE TOP LAYER TO WITHIN +/-20MM (0.75") FROM THE TOP OF THE FIBERS (OR MORE IF PREFERRED)